



# Infinity & Infinity HD

Residential  
Elevator

Owner's  
Manual

 savaria.

## **IMPORTANT**

Ensure that only an Authorized Savaria Dealer installs and services the Savaria® Infinity & Infinity HD Residential Elevators. Under no circumstances is anyone other than a dealer with Savaria training and authorization to install, adjust, service or modify any mechanical or electrical device on this equipment. Failure to follow this warning can result in safety system compromises or defeat; this can result in serious injury or death. Savaria accepts no liability for property damage, warranty claims or personal injury, including death, in this circumstance.

Passenger safety is the result of countless details in the equipment's design, manufacture, and installation. After installation, reliable operation and continual safe operation requires regular service and inspection at least twice per year, or more frequently where usage, environment, or local jurisdiction requires. As the Owner, you are responsible for ensuring that regular service and inspections occur in a timely manner.

Refer to this manual for specifications, operating instructions and maintenance of the Infinity & Infinity HD Residential Elevators.

Upon completion of installation, the dealer must provide you with the following information and ensure it is recorded in this manual. In addition, either the dealer or you must keep any service and/or maintenance records in the Maintenance Record section of this manual.

## **WARRANTY**

Ensure your Authorized Savaria Dealer provides you with a copy of the manufacturer's limited parts warranty and documentation relating to any Dealer labour warranty

## **FOR OWNER'S RECORDS**

Customer Name: \_\_\_\_\_

Installing Dealer: \_\_\_\_\_

Dealer's Telephone Number: \_\_\_\_\_

Date Installed: \_\_\_\_\_

Serial/Job Number: \_\_\_\_\_

---

## TABLE OF CONTENTS

TO ENSURE SAFE OPERATION .....	4
1. SPECIFICATIONS .....	6
2. FEATURES .....	7
3. OPTIONS .....	9
4. OPERATION .....	10
Operating from the Landing Controls .....	10
Operating from the Cab Operating Panel (COP) Controls .....	11
Cab Lights.....	11
5. EMERGENCY LIGHTING .....	11
6. POWER FAILURE AND EMERGENCY LOWERING .....	12
7. EMERGENCY OPENING OF AUTO SLIM LANDING DOORS.....	12
8. MANUAL LOWERING DEVICE (MACHINE ROOM) .....	13
9. DIAGNOSTICS .....	14
10. MAINTENANCE .....	14
Maintenance Record .....	17